

Deflating your Avataq



Step 1

Pull the valve out using the small tab



Step 2

Squeeze the Avataq until all the air is out